

AD-A103 660

HARRY DIAMOND LABS ADELPHI MD
THE AURORA BREMSSTRAHLUNG ENVIRONMENT.(U)
JUL 81 K G KERRIS
HDL-TM-81-18

F/6 4/1

MIPR-80-528

NL


UNCLASSIFIED

For
40 AERO



END
DATE
FILMED
10-81
DTIC



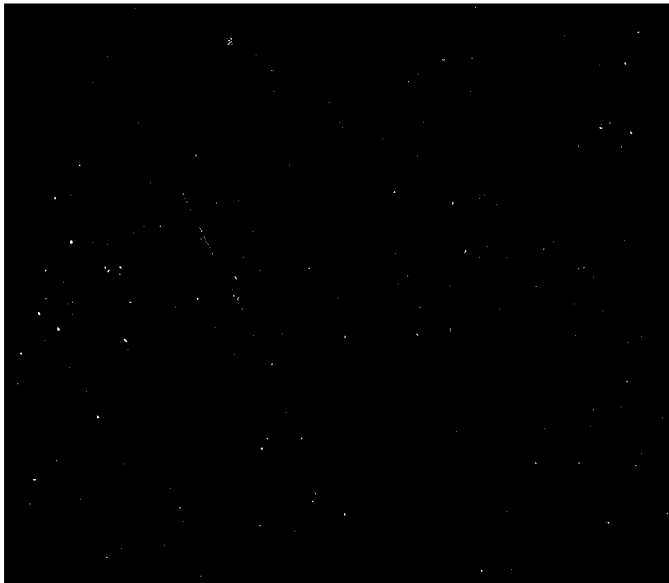

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER HDL-TM-81-18	2. GOVT ACCESSION NO. AD-103660	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) The AURORA Bremsstrahlung Environment	5. TYPE OF REPORT & PERIOD COVERED Technical Memorandum	6. PERFORMING ORG. REPORT NUMBER
7. AUTHOR(s) Klaus G. Kerris	8. CONTRACT OR GRANT NUMBER(s)	
9. PERFORMING ORGANIZATION NAME AND ADDRESS Harry Diamond Laboratories 2800 Powder Mill Road Adelphi, MD 20783	10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS Prog Ele: 6.27.10.H	
11. CONTROLLING OFFICE NAME AND ADDRESS Director Defense Nuclear Agency Washington, DC 20305	12. REPORT DATE July 1981	13. NUMBER OF PAGES 24
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)	15. SECURITY CLASS. (of this report) UNCLASSIFIED	15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES HDL Proj: 201023 MIPR-80-528 This work was sponsored by the Defense Nuclear Agency under subtask G37IAXYX970; work unit 07, entitled AURORA Operations.		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) AURORA Dose rate Bremsstrahlung Spectrum Dose		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) This report compiles all measurements and calculations characterizing the bremsstrahlung output of AURORA. The first part gives measurements of the dose distribution throughout the test cell and on the anode faceplates. All dose maps are given in normalized form so that the dose and the dose rate may easily be found for any Marx charging voltage. The second part describes the measured time history of the bremsstrahlung pulse from early times to very late times over four decades of amplitude. The third part discusses the bremsstrahlung energy spectrum and presents calculations of the energy and the angular distribution of photons. It is hoped that this report will be useful to prospective experimenters planning tests at the AURORA Facility.		

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

163000

CONTENTS

	<u>Page</u>
1. DOSE DISTRIBUTION.....	5
1.1 Test Cell Coordinate System.....	5
1.2 Normalization of Dose Maps.....	6
1.3 Normalized Center Line Dose.....	7
1.4 Normalized Test Cell Isodose Contours: Plan.....	7
1.5 Normalized Test Cell Isodose Contours: Elevations.....	7
1.6 Normalized Test Cell Isodose Contours: Detail.....	7
1.7 Normalized Anode Faceplate Isodose Contours.....	7
2. PULSE SHAPE.....	15
3. BREMSSTRAHLUNG SPECTRUM.....	17
DISTRIBUTION.....	21

FIGURES

1 AURORA test cell coordinate system.....	5
2 Dose and dose rate multipliers.....	6
3 Normalized center line dose.....	8
4 Normalized test cell isodose contours, plan.....	9
5 Normalized test cell isodose contours, $z = 1$ m.....	10
6 Normalized test cell isodose contours, $z = 3$ m.....	10
7 Normalized test cell isodose contours, $z = 5$ m.....	11
8 Normalized test volume isodose contours, longitudinal sections.....	12
9 Normalized test volume isodose contours, vertical sections.....	12
10 Normalized anode faceplate map, 80-kV Marx charge.....	13
11 Normalized anode faceplate map, 110-kV Marx charge.....	14
12 AURORA bremsstrahlung pulse.....	15
13 AURORA bremsstrahlung pulse at early and late times.....	16
14 Bremsstrahlung spectrum, 110-kV Marx charge.....	18
15 Bremsstrahlung angular distribution, single anode, 110-kV Marx charge.....	19
16 Bremsstrahlung spectrum, 90-kV Marx charge.....	19

Accordion for HTS CM&I DATE 7/8 Unannounced Notification	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	BY Distribution/ Availability Codes	Avail and/or Special <div style="font-size: 2em; font-weight: bold; text-align: center;">A</div>
--	---	---	--

1. DOSE DISTRIBUTION

1.1 Test Cell Coordinate System

The coordinate system used to describe the dose distribution in the Harry Diamond Laboratories AURORA test cell is illustrated in figure 1. It is a right-handed cartesian

coordinate system with the z-axis along the machine center line and the origin in the plane of the forward test cell wall. Coordinates are always specified in meters. The machine center line is 1.8 m (approximately 70 in.) above the test cell floor. Since the pyramid shaped "dimple panel" that covers the four anodes is recessed into the forward test cell wall, it is possible to have negative values of z.

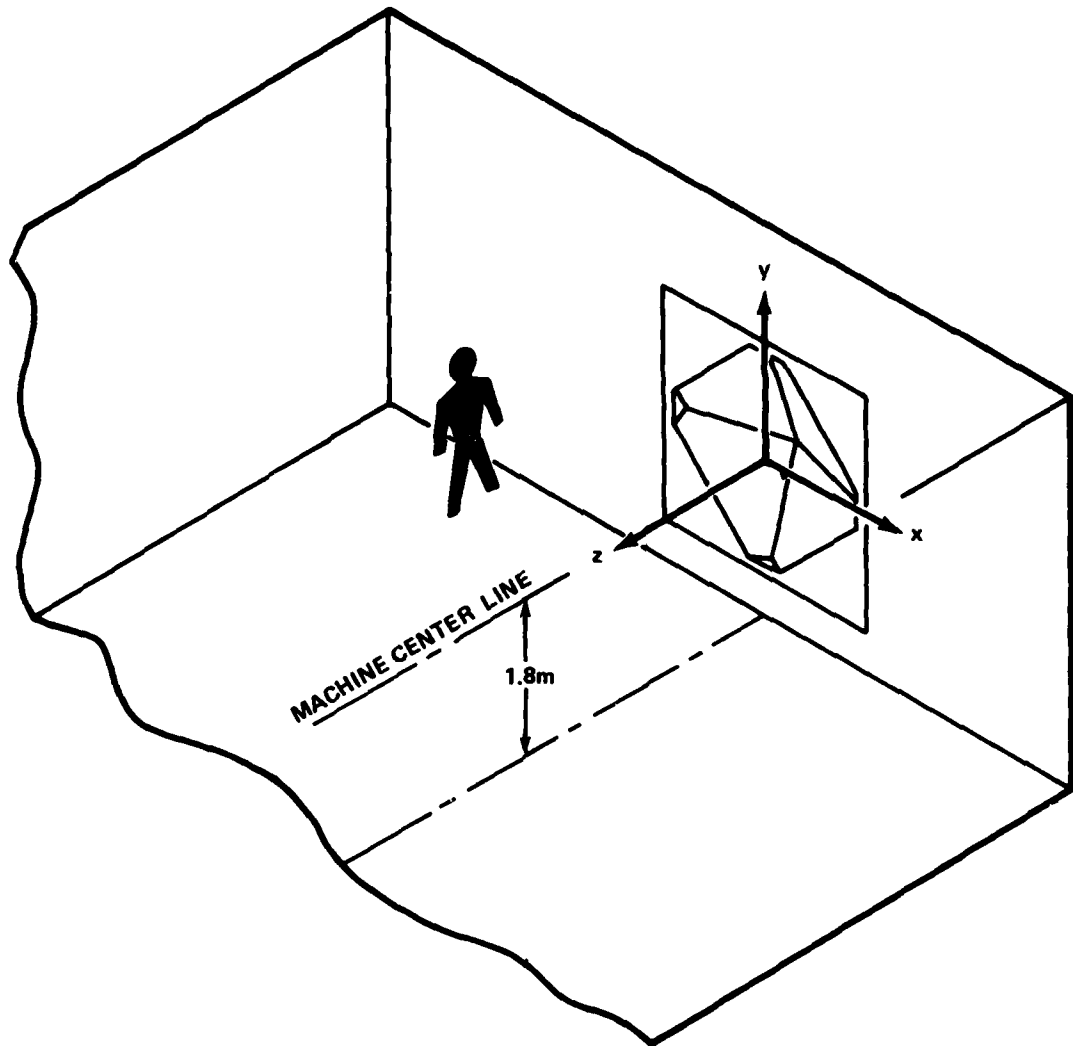


Figure 1. AURORA test cell coordinate system.

1.2 Normalization of Dose Maps

To make the dose maps usable for any machine operating parameter, we present them in normalized form, with 1 krad (Si) in the "hot spot" (that is, the region of maximum dose in the test cell) and 1 rad (Si) near the rear of the test cell. To find the actual dose or dose rate for a given Marx generator charging voltage, the normalized dose values must be multiplied by the appropriate constant (K_D for dose, K_R for dose rate) found in figure 2; thus,

$$D = K_D D_N,$$

$$(1) \quad K_R = \text{dose rate multiplier (from fig. 2).}$$

$$\dot{D} = K_R \dot{D}_N, \quad (2)$$

where

D = silicon equilibrium dose in rad (Si),

\dot{D} = silicon equilibrium dose rate in rad (Si)/s,

D_N = normalized dose (from fig. 3 to 11),

K_D = dose multiplier (from fig. 2),

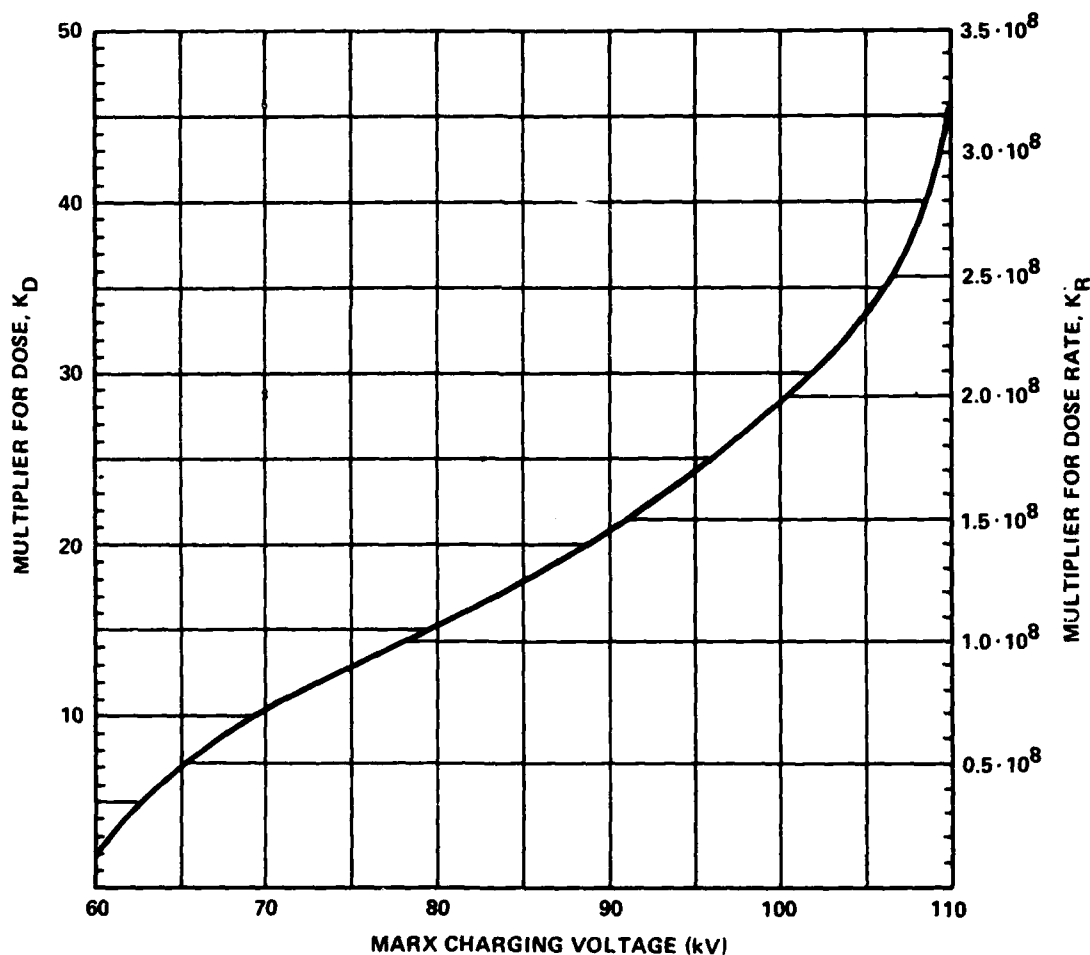


Figure 2. Dose and dose rate multipliers.

1.3 Normalized Center Line Dose

The normalized dose along the machine center line (that is, on the z-axis) is shown in figure 3 as a function of z. The hot spot at $z \cong 0.15$ m is the highest dose achievable anywhere in the AURORA test cell, except on the anode plates. Also, from $z = 1$ m to about $z = 10$ m, the dose falls off as z^{-2} .

1.4 Normalized Test Cell Isodose Contours: Plan

Figure 4 shows isodose contours in the test cell in a horizontal plane 1.8 m above the floor (that is, in the x-z plane). Since the dose distribution in the test cell is approximately rotationally symmetrical about the machine center line, figure 4 may be used also to find the dose for points where $y \neq 0$. In that case, the x-coordinate of figure 4 may be reinterpreted as an r-coordinate, where $r = (x^2 + y^2)^{1/2}$.

1.5 Normalized Test Cell Isodose Contours: Elevations

Figures 5 to 7 show gross isodose contours in the test cell in the vertical x-y planes at $z = 1$, $z = 3$, and $z = 5$ m.

1.6 Normalized Test Cell Isodose Contours: Detail

The volume in the immediate vicinity of the hot spot has been mapped in considerably more detail than the rest of the test cell because it is the most frequently used area for irradiations and also because the dose gradients are higher there than elsewhere in the

test cell. A cylindrical volume 1 m long and 1 m in diameter surrounding the hot spot is generally called the "test volume." Figure 8 shows two longitudinal sections through this test volume, one horizontal in the x-z plane, the other in a plane that is at 45 deg to the horizontal. (The horizontal section is equally valid for the vertical, or y-z, plane.) The important thing to note here is that for $z < 0.5$ m, the dose distribution is no longer even approximately rotationally symmetrical about the z-axis, but takes on a distinct fourfold symmetry. This loss of symmetry is dramatically evident in figure 9, which shows two vertical sections through the test volume, one at $z = 0.15$ m (right through the hot spot) and one at $z = -0.1$ m, in which the effect of the four individual anodes is more pronounced.

1.7 Normalized Anode Faceplate Isodose Contours

As mentioned in section 1.3, certain small areas of the anode faceplates exhibit a dose (or dose rate) about 20 percent higher than that in the hot spot. The anode hot spots can be seen in figures 10 and 11, which are the normalized anode faceplate maps for 80-kV and 110-kV Marx generator charging voltage, respectively. The four quadrants in these figures represent the four faces of the dimple panel, which is in the shape of a shallow concave pyramid. The influence of the four anodes, which are located behind the faces of the pyramid, is clearly visible. Letters A through D are the conventional identification of the four anodes. (See pages 8 through 14 for figures 3 through 11.)

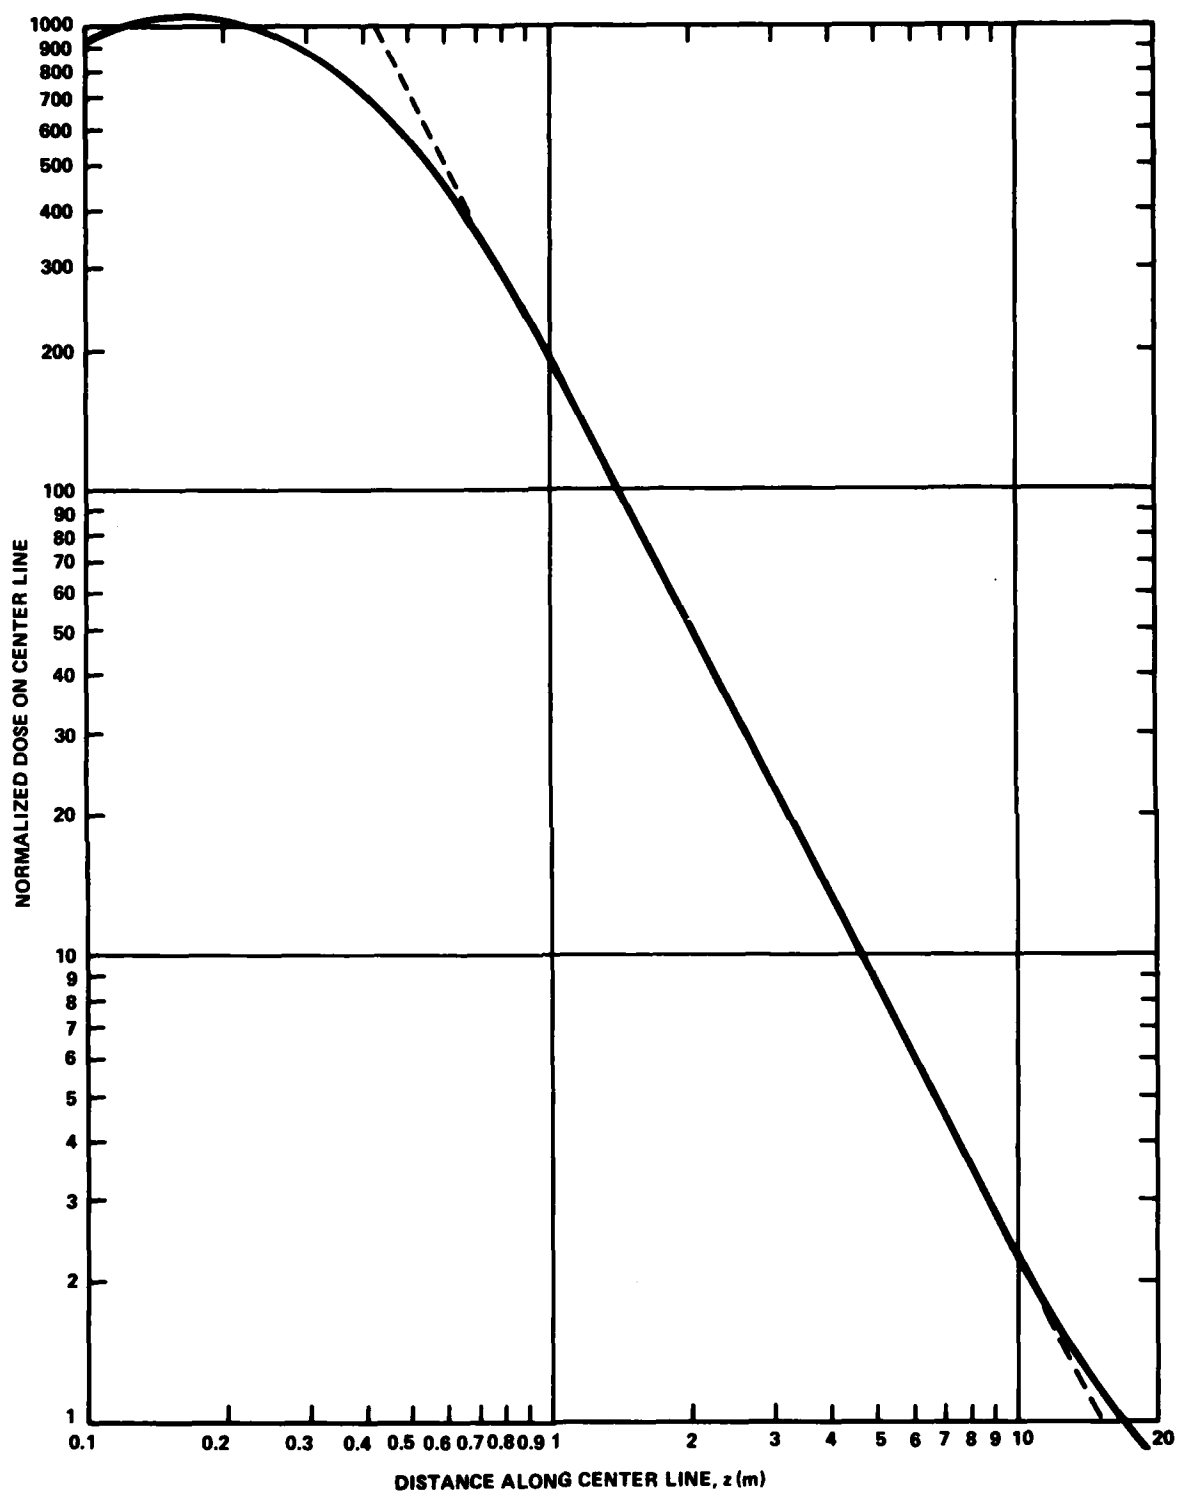


Figure 3. Normalized center line dose (must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

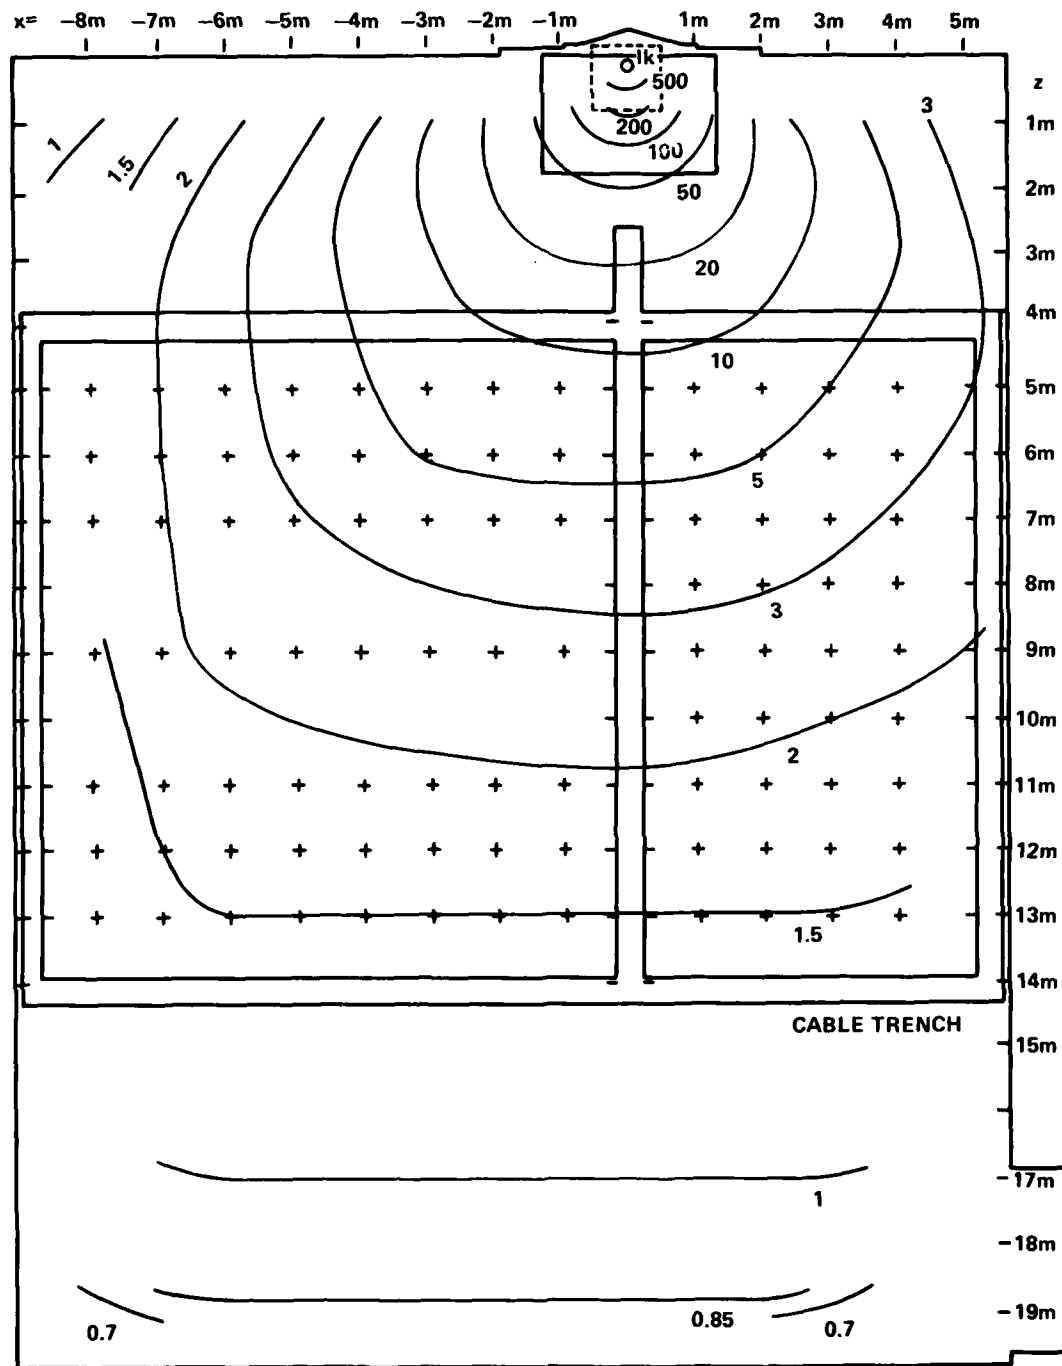


Figure 4. Normalized test cell isodose contours, plan (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

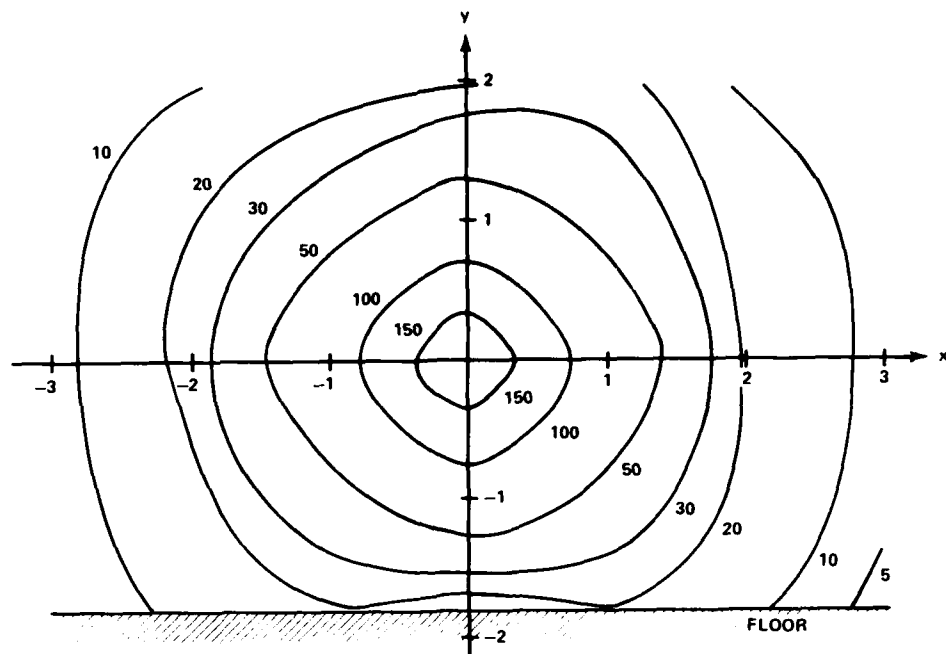


Figure 5. Normalized test cell isodose contours, $z = 1$ m (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

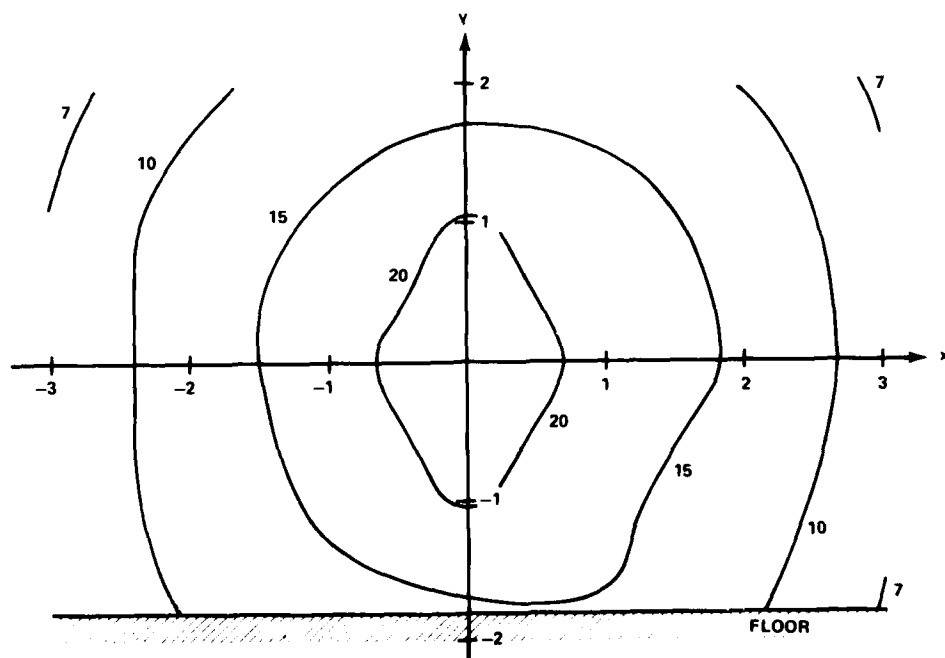


Figure 6. Normalized test cell isodose contours, $z = 3$ m (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

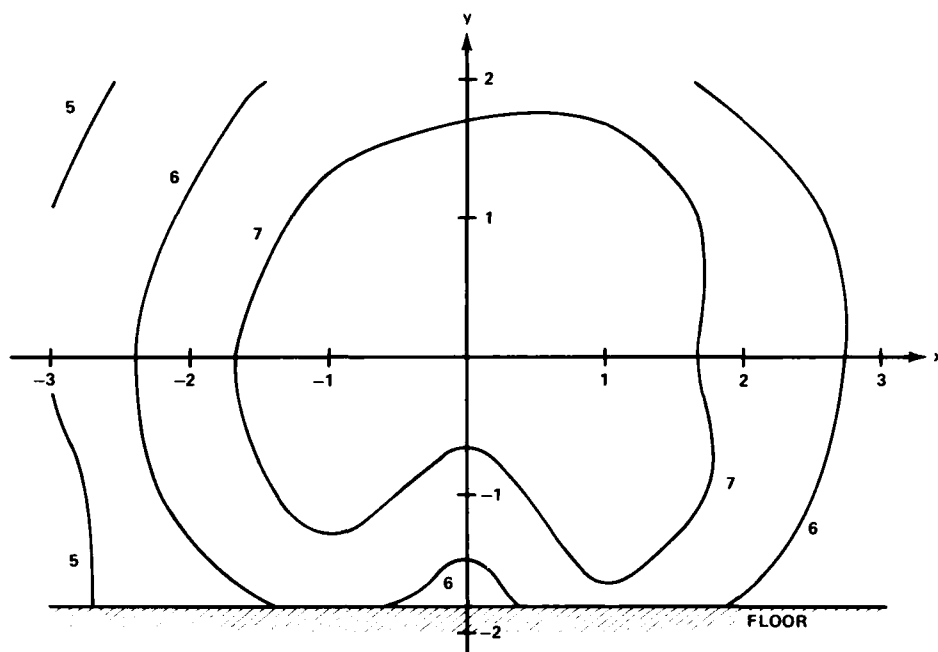


Figure 7. Normalized test cell isodose contours, $z = 5$ m (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

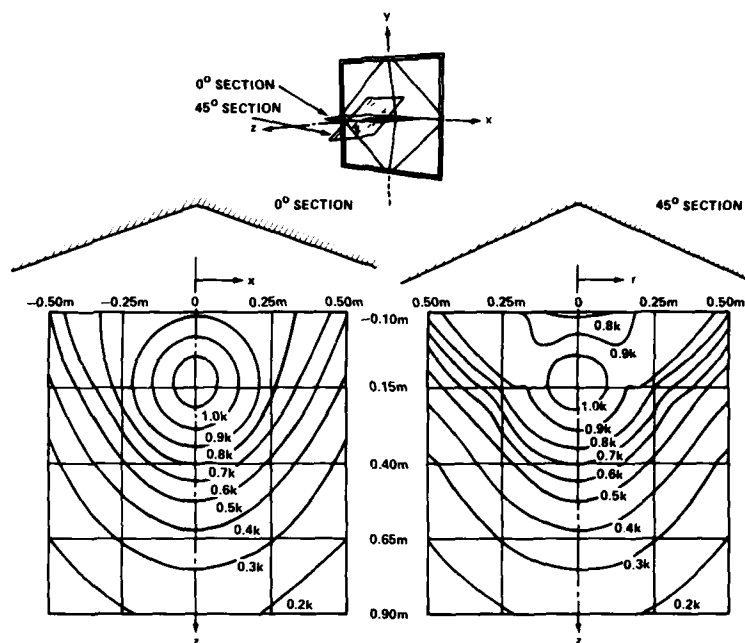


Figure 8. Normalized test volume isodose contours, longitudinal sections (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

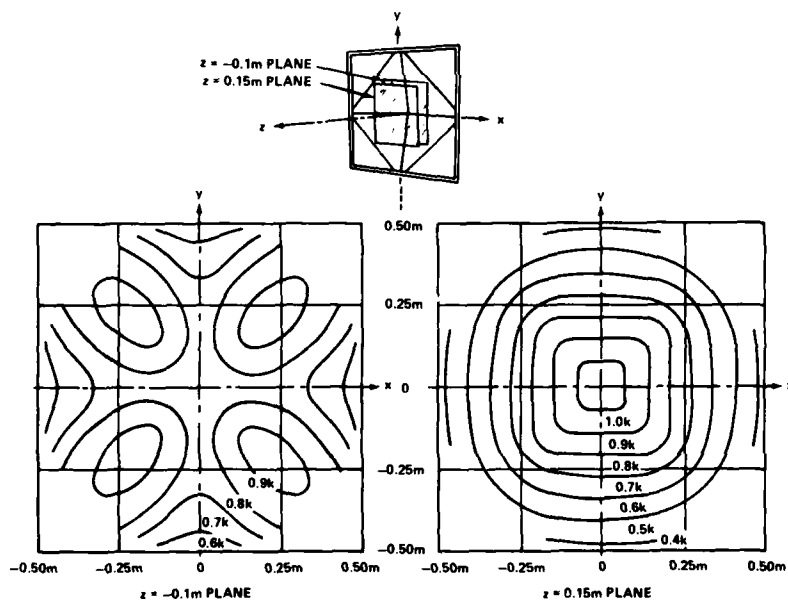


Figure 9. Normalized test volume isodose contours, vertical sections (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

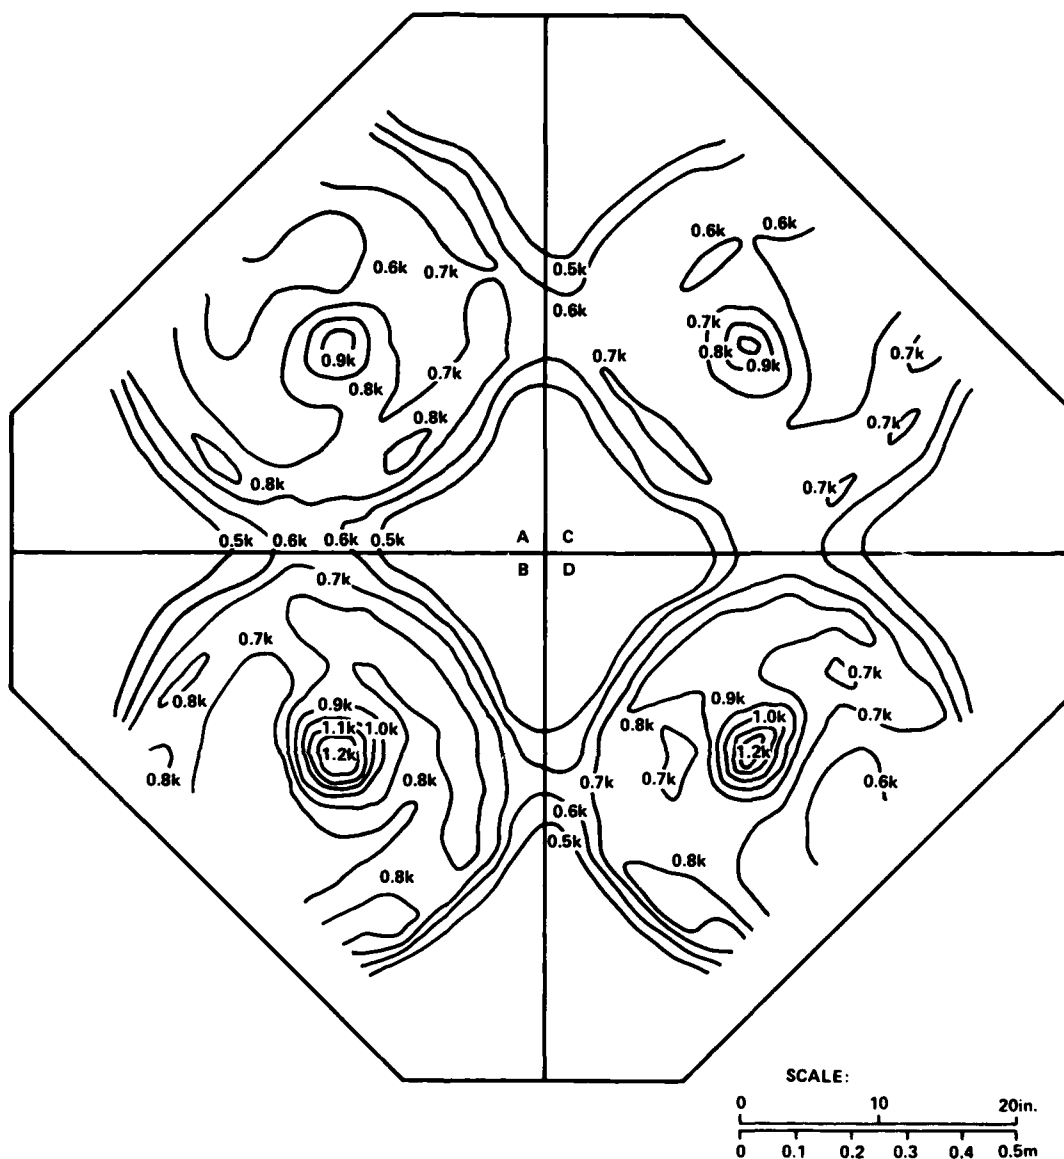


Figure 10. Normalized anode faceplate map, 80-kV Marx charge (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

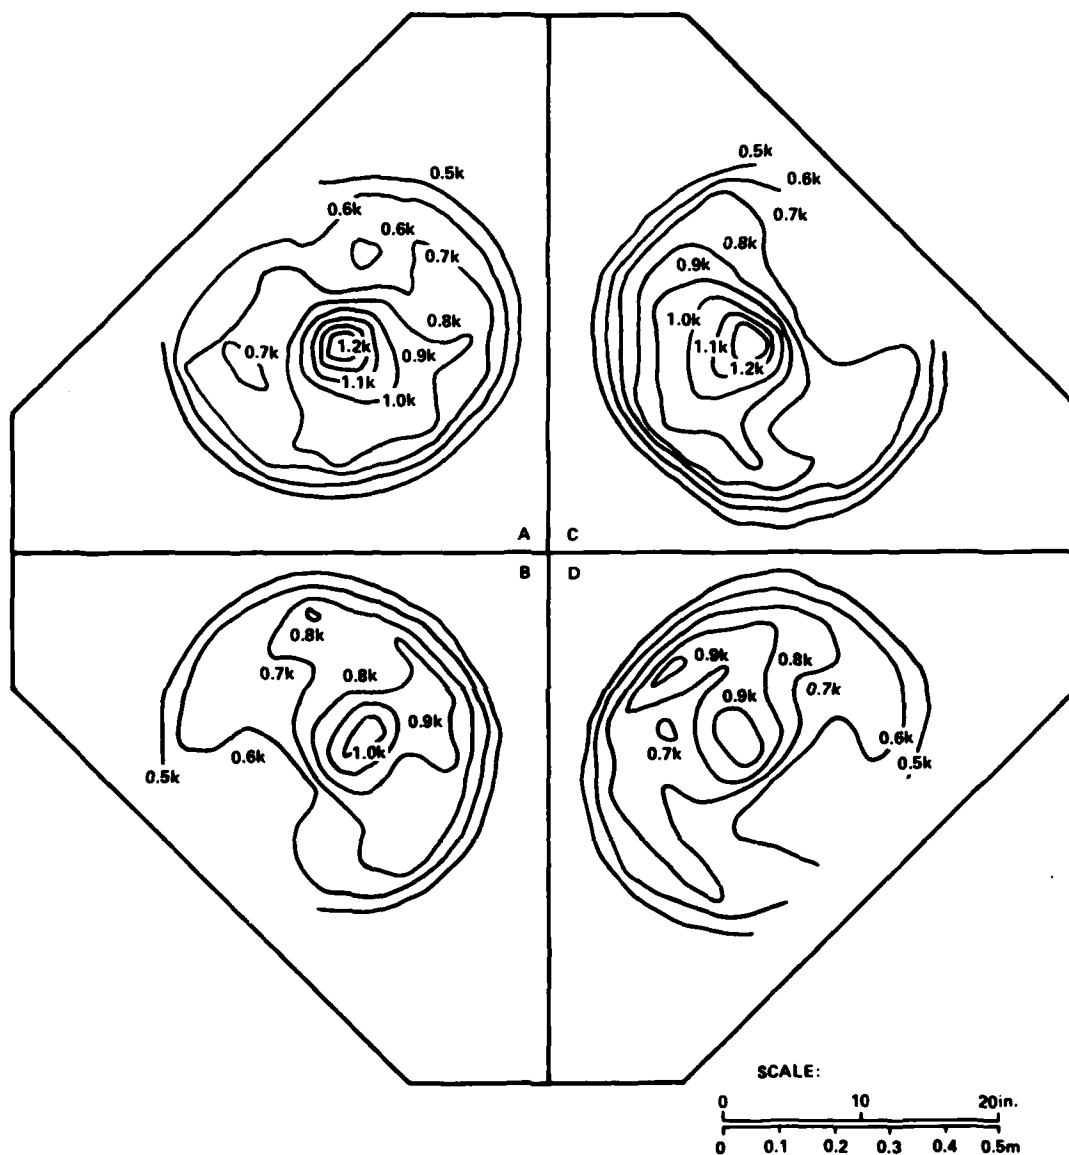


Figure 11. Normalized anode faceplate map, 110-kV Marx charge (all contour values must be multiplied by appropriate constant for dose or dose rate—see sect. 1.2 and fig. 2).

2. PULSE SHAPE

The shape of the AURORA bremsstrahlung pulse is shown in figure 12, which is an oscilloscope trace showing the dose rate as a function of time as measured by a Pilot-B scintillator and vacuum photodiode.¹ The dose rate at very early and very late times, relative to the dose rate at the peak, is shown in figure 13. Figure 13 is a composite plot of a number of measurements taken on a number of AURORA pulses from 1973 to 1979 and may be regarded as typical for a good AURORA pulse at either a 90- or a 110-kV Marx charge, measured in the hot spot. At $z = 4$ m, the pulse tends to be a little wider, averaging about 135 ns full width at half maximum (FWHM).

The dose rate at the peak of the pulse is not calculated correctly by dividing the dose by the FWHM; that is,

$$\dot{D}_{\text{peak}} \neq D/\text{FWHM} . \quad (3)$$

The correct equation is

$$\dot{D}_{\text{peak}} = D/\text{eff width} , \quad (4)$$

where the effective width is defined by

$$\text{eff width} = \text{area/peak height} . \quad (5)$$

The dose rate is therefore calculated most accurately by measuring the peak height and the area of the bremsstrahlung pulse (fig. 12) and using equations (4) and (5). When this accuracy is not required and it is inconvenient to measure the area under the pulse, it is useful to know the following relationship (true for a typical good AURORA pulse):

$$\text{eff width}/\text{FWHM} = 1.08 \pm 0.05 . \quad (6)$$

The dose rate can therefore be approximated pretty well by

$$\dot{D}_{\text{peak}} \cong D/(1.08 \text{ FWHM}) . \quad (7)$$

¹Klaus G. Kerris, *The AURORA Dosimetry System*, Harry Diamond Laboratories HDL-TR-1754 (March 1976).

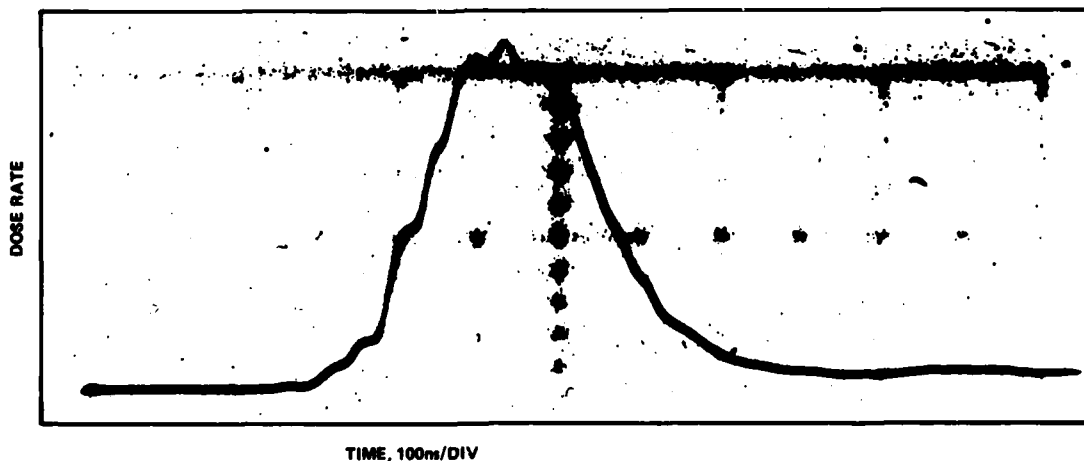


Figure 12. AURORA bremsstrahlung pulse.

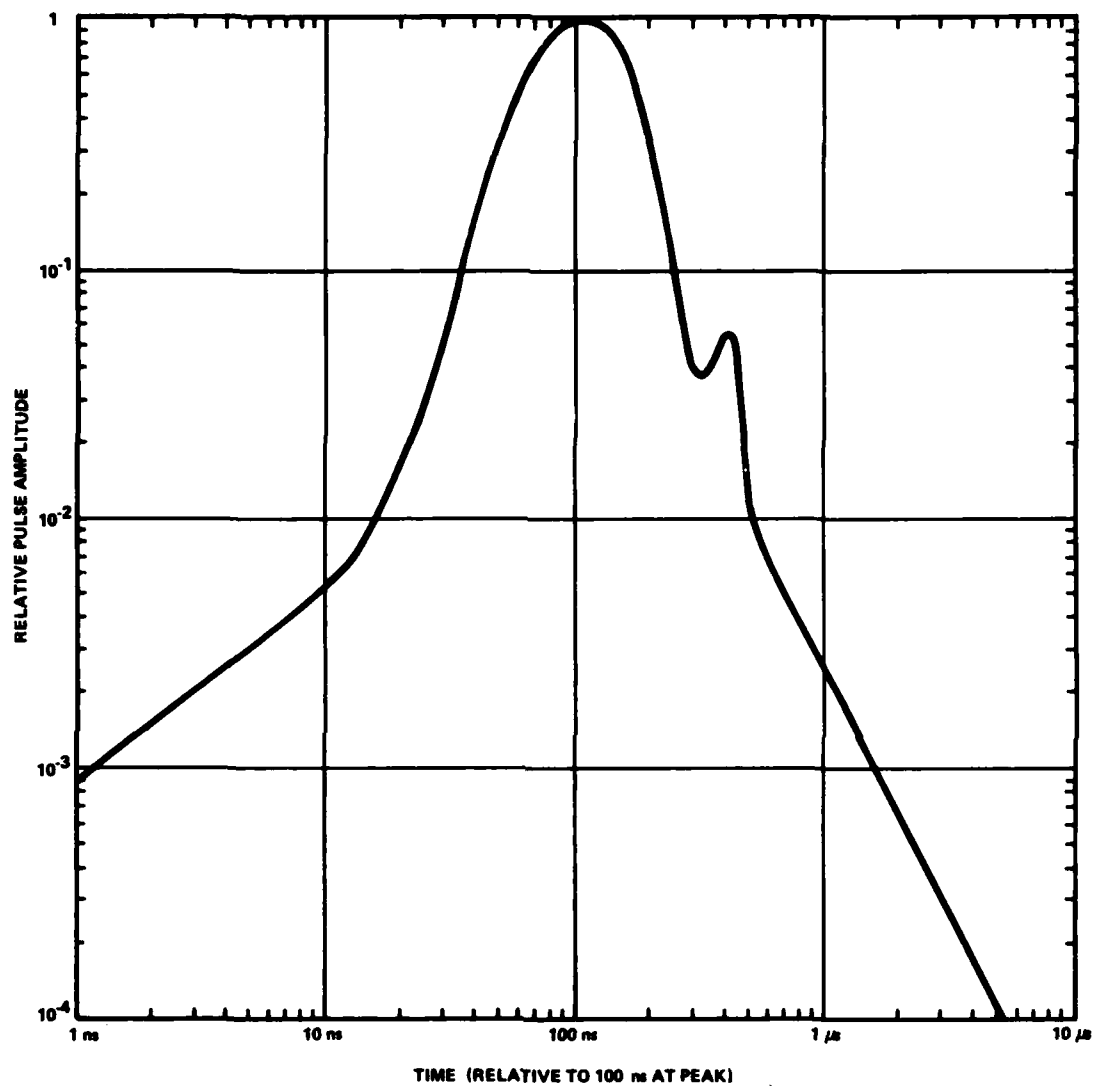


Figure 13. AURORA bremsstrahlung pulse at early and late times.

3. BREMSSTRAHLUNG SPECTRUM

The AURORA bremsstrahlung spectrum is difficult to measure directly because of the peculiar source geometry of the four large anodes. That the hot spot is almost surrounded by four large bremsstrahlung sources makes any kind of collimated measurement almost impossible. Calculation of the bremsstrahlung spectrum from a known target is quite feasible, provided that the energy spectrum and the angular distribution of the incident electrons are known. The electron energy spectrum can be calculated, given good time-resolved voltage and current diagnostics; however, the angular distribution of the incident electrons is not well known at all. Some reasonable assumptions can be made, though.

For the following spectra, we calculated the electron energy spectrum from the voltage and current pulses using the computer code

EBSPEC. All electrons were assumed to be incident on the AURORA target at an angle of 20 deg from the normal. (This angle was deduced from the fact that the dose distribution from a single anode is symmetrical about an axis that is inclined at 20 deg with respect to the normal to the anode plane.) The transmitted bremsstrahlung spectrum and angular distribution were then calculated by using the electron-photon transport code TIGER. Figure 14 shows the energy spectrum, and figure 15 shows the angular distribution of photon intensity, for a single anode, for a 110-kV Marx charge. Figure 16 shows the energy spectrum for a 90-kV Marx charge.

All Monte Carlo transport calculations were run for 5000 histories of incident primary electrons. The statistical error is less than 10 percent from 0.2 to 4.0 MeV for the 110-kV spectrum and less than 16 percent from 0.15 to 3.0 MeV for the 90-kV spectrum.

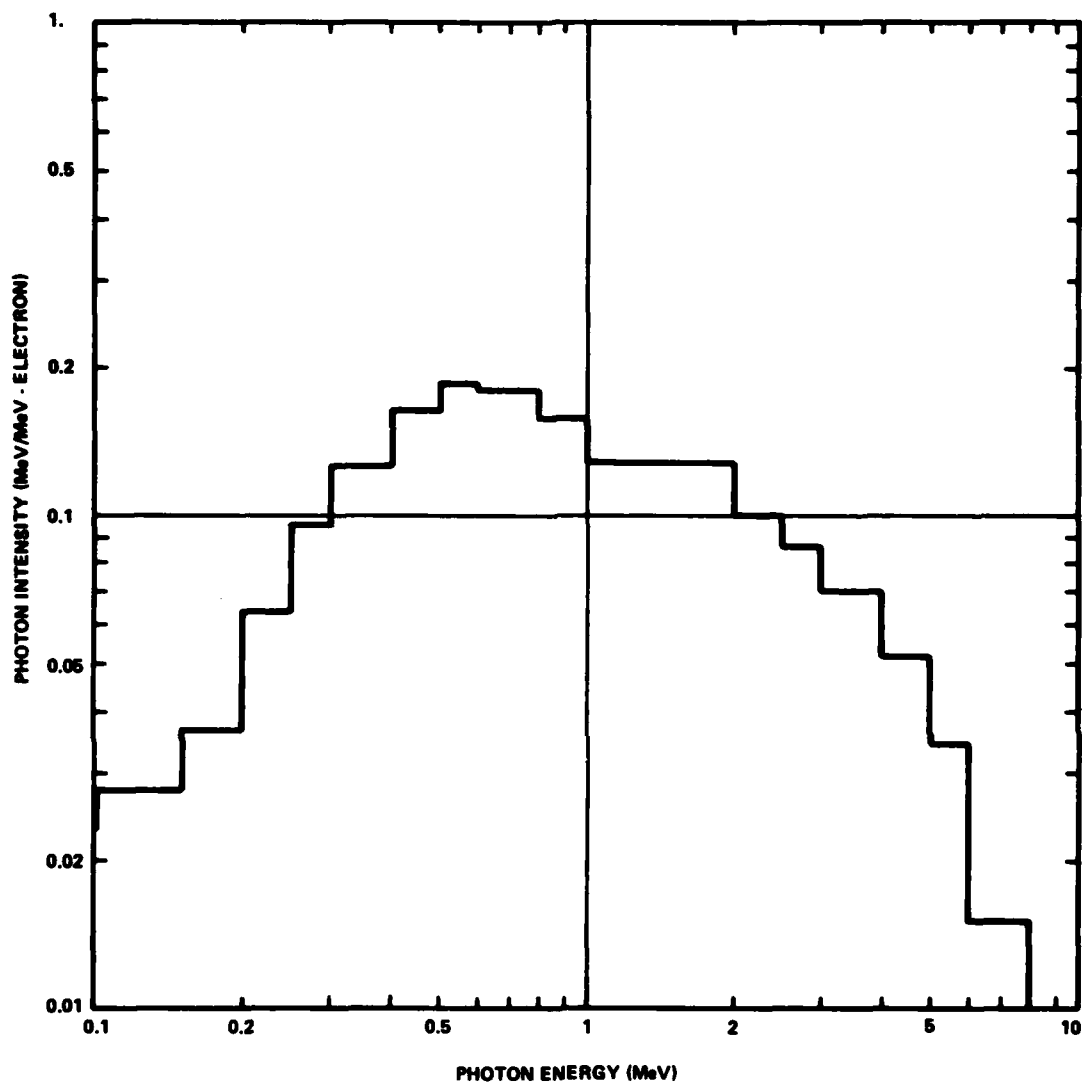


Figure 14. Bremsstrahlung spectrum, 110-kV Marx charge.

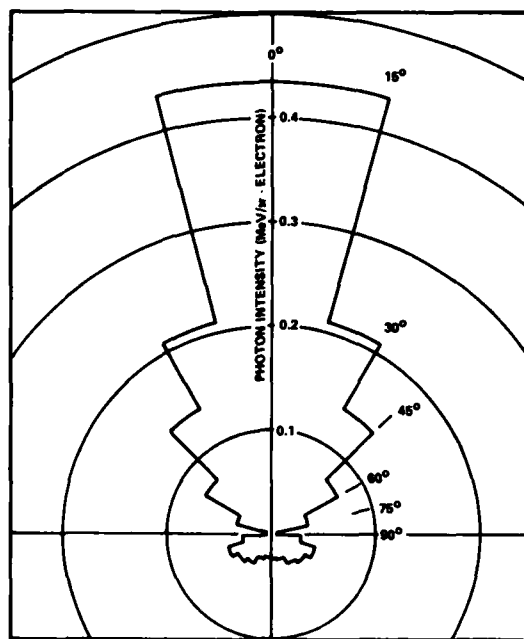


Figure 15. Bremsstrahlung angular distribution, single anode, 110-kV Marx charge.

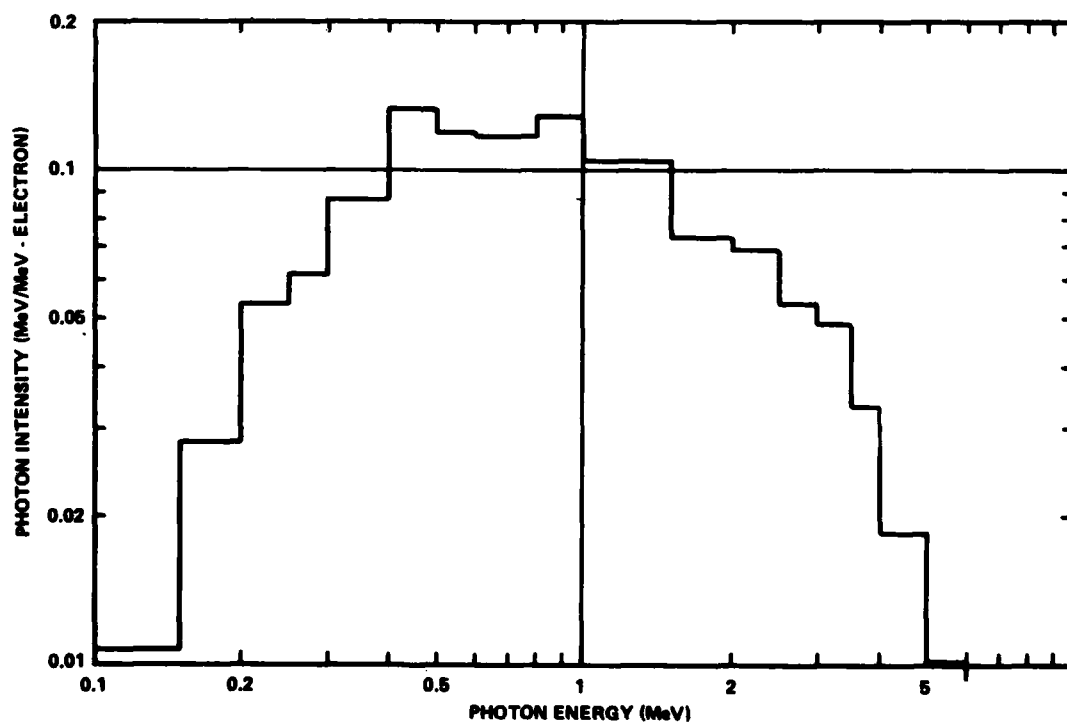


Figure 16. Bremsstrahlung spectrum, 90-kV Marx charge.

DISTRIBUTION

ADMINISTRATOR
DEFENSE TECHNICAL INFORMATION CENTER
ATTN DTIC-DDA (12 COPIES)
CAMERON STATION, BUILDING 5
ALEXANDRIA, VA 22314

COMMANDER
US ARMY RSCH & STD GP (EUR)
ATTN CHIEF, PHYSICS & MATH BRANCH
FPO NEW YORK 09510

COMMANDER
US ARMY ARMAMENT MATERIEL
READINESS COMMAND
ATTN DRSAR-LEP-L, TECHNICAL LIBRARY
ROCK ISLAND, IL 61299

COMMANDER
US ARMY MISSILE & MUNITIONS
CENTER & SCHOOL
ATTN ATSK-CTD-F
REDSTONE ARSENAL, AL 35809

DIRECTOR
US ARMY MATERIEL SYSTEMS ANALYSIS
ACTIVITY
ATTN DRXSY-MP
ABERDEEN PROVING GROUND, MD 21005

DIRECTOR
US ARMY BALLISTIC RESEARCH LABORATORY
ATTN DRDAR-TSB-S (STINFO)
ABERDEEN PROVING GROUND, MD 21005

US ARMY ELECTRONICS TECHNOLOGY
AND DEVICES LABORATORY
ATTN DELET-DD
FT MONMOUTH, NJ 07703

HQ, USAF/SAMI
WASHINGTON, DC 20330

TELEDYNE BROWN ENGINEERING
CUMMINGS RESEARCH PARK
ATTN DR. MELVIN L. PRICE, MS-44
HUNTSVILLE, AL 35807

ASSISTANT TO THE SECRETARY OF DEFENSE
(ATOMIC ENERGY)
ATTN EXECUTIVE ASSISTANT
WASHINGTON, DC 20301

DIRECTOR
DEFENSE INTELLIGENCE AGENCY
ATTN DT-1B, R. RUBENSTEIN
WASHINGTON, DC 20301

DIRECTOR
DEFENSE NUCLEAR AGENCY
ATTN TITL
ATTN DDST
ATTN RAEV
ATTN STNA
WASHINGTON, DC 20305

COMMANDER
FIELD COMMAND
DEFENSE NUCLEAR AGENCY
ATTN FCPR
KIRTLAND AFB, NM 87115

CHIEF
FIELD COMMAND
DEFENSE NUCLEAR AGENCY
LIVERMORE BRANCH
ATTN FCPRL
P.O. BOX 808, L-317
LIVERMORE, CA 94550

DIRECTOR
JOINT STRAT TGY PLANNING STAFF
OFFUTT AFB
ATTN JLA
ATTN JSAS
OMAHA, NB 68113

UNDER SECY OF DEF FOR RSCH & ENGRG
DEPARTMENT OF DEFENSE
ATTN STRATEGIC & SPACE SYS (OS)
WASHINGTON, DC 20301

DEP CH OF STAFF FOR RSCH DEV & ACQ
DEPARTMENT OF THE ARMY
ATTN DAMA-CSS-N
WASHINGTON, DC 20310

COMMANDER
US ARMY MISSILE COMMAND
ATTN DRCPM-PE-EA
ATTN RSIC
REDSTONE ARSENAL, AL 35898

COMMANDER
US ARMY NUCLEAR & CHEMICAL AGENCY
ATTN LIBRARY
7500 BACKLICK ROAD
BUILDING 2073
SPRINGFIELD, VA 22150

COMMANDER
US ARMY TEST AND EVALUATION COMMAND
ATTN DRSTE-EL
ABERDEEN PROVING GROUND, MD 21005

DISTRIBUTION (Cont'd)

COMMANDER OFFICER
NAVAL INTELLIGENCE SUPPORT CTR
4301 SUITLAND ROAD, BLDG 5
ATTN NISC-45
WASHINGTON, DC 20390

COMMANDING OFFICER
NAVAL RESEARCH LABORATORY
ATTN CODE 4701, J. BROWN
ATTN CODE 7550, J. DAVIS
ATTN CODE 6770, G. COOPERSTEIN
WASHINGTON, DC 20375

OFFICER IN CHARGE
NAVAL SURFACE WEAPONS CENTER
WHITE OAK LABORATORY
ATTN CODE R40
ATTN CODE F31
SILVER SPRING, MD 20910

COMMANDER
NAVAL WEAPONS CENTER
ATTN CODE 233, TECH LIB
CHINA LAKE, CA 93555

OFFICE OF THE CHIEF OF NAVAL OPERATIONS
ATTN OP 604E14, R. BLAISE
WASHINGTON, DC 20350

AFWL/DYC
ATTN SUL
ATTN CA
ATTN DYC
ATTN NT
ATTN DYP
KIRTLAND AFB, NM 87117

BALLISTIC MISSILE OFFICE/MN
AIR FORCE SYSTEMS COMMAND
(MINUTEMAN)
ATTN MNNH
ATTN MNRTE
NORTON AFB, CA 92409

DEPUTY CHIEF OF STAFF
RESEARCH, DEVELOPMENT, & ACQ
DEPARTMENT OF THE AIR FORCE
ATTN AFRDQSM
WASHINGTON, DC 20330

HEADQUARTERS SPACE DIVISION/IN
AIR FORCE SYSTEMS COMMAND
POST OFFICE BOX 92960
WORLDWAY POSTAL CENTER
(INTELLIGENCE)
ATTN IND, D. MUSKIN
LOS ANGELES, CA 90009

HEADQUARTERS SPACE DIVISION/SK
AIR FORCE SYSTEMS COMMAND
POST OFFICE BOX 92960
WORLDWAY POSTAL CENTER
(SPACE COMM SYSTEMS)
ATTN SKF, P. STADLER
LOS ANGELES, CA 90009

DEPARTMENT OF ENERGY
ATTN OFC OF INERT FUSION, T. GODLOVE
ATTN OFC OF INERT FUSION, C. HILLAND
ATTN OFC OF INERT FUSION, S. KAHALAS
WASHINGTON, DC 20545

ADVANCED RESEARCH & APPLICATIONS CORP
1223 E. ARQUES AVENUE
ATTN R. ARMISTEAD
SUNNYVALE, CA 94086

AVCO RESEARCH & SYSTEMS GROUP
201 LOWELL STREET
ATTN LIBRARY A830
WILMINGTON, MA 01887

BDM CORP.
7915 JONES BRANCH DRIVE
ATTN CORPORATE LIBRARY
MCLEAN, VA 22102

BOEING CO.
PO BOX 3707
ATTN AEROSPACE LIBRARY
SEATTLE, WA 98124

DIKEWOOD CORPORATION
1613 UNIVERSITY BLVD, NE
ATTN L. DAVIS
ALBUQUERQUE, NM 87102

EG&G WASHINGTON ANALYTICAL
SERVICES CENTER, INC.
PO BOX 10218
ATTN LIBRARY
ALBUQUERQUE, NM 87114

GENERAL ELECTRIC CO.
SPACE DIVISION
VALLEY FORGE SPACE CENTER
PO BOX 8555
ATTN J. PEDEN
PHILADELPHIA, PA 19101

INSTITUTE FOR DEFENSE ANALYSES
400 ARMY-NAVY DRIVE
ATTN CLASSIFIED LIBRARY
ARLINGTON, VA 22202

DISTRIBUTION (Cont'd)

IRT CORP.
PO BOX 81087
ATTN R. MERTZ
SAN DIEGO, CA 92138

JAYCOR
11011 TORREYANA ROAD
PO BOX 85154
ATTN E. WENAAS
SAN DIEGO, CA 92138

JAYCOR
205 S. WHITING STREET, SUITE 500
ATTN R. SULLIVAN
ALEXANDRIA, VA 22304

KAMAN SCIENCES CORP.
PO BOX 7463
ATTN A. BRIDGES
ATTN J. HOFFMAN
ATTN D. BRYCE
ATTN W. WARE
COLORADO SPRINGS, CO 80933

KAMAN TEMPO
2560 HUNTINGTON AVE - SUITE 506
ATTN DASIAAC
ALEXANDRIA, VA 22303

LAWRENCE LIVERMORE NATIONAL LABORATORY
PO BOX 808
ATTN DOC CON FOR L-47, L. WOUTERS
ATTN DOC CON FOR TECHNICAL INFORMATION
DEPT LIBRARY
ATTN DOC CON FOR L-153
ATTN DOC CON FOR L-153, D. MEEKER
ATTN DOC CON FOR L-545, J. NUCKOLLS
ATTN DOC CON FOR W. PICKLES, L-401
LIVERMORE, CA 94550

LOCKHEED MISSILES & SPACE CO., INC.
3251 HANOVER STREET
ATTN L. CHASE
PALO ALTO, CA 94304

LOCKHEED MISSILES & SPACE CO., INC.
PO BOX 504
ATTN S. TAIMUTY
SUNNYVALE, CA 94086

LOS ALAMOS NATIONAL SCIENTIFIC LABORATORY
MAIL STATION 5000
PO BOX 1663
ATTN DOC CON FOR MS222, J. BROWNELL
LOS ALAMOS, NM 87545

MAXWELL LABS, INC.
9244 BALBOA AVENUE
ATTN A. MILLER
ATTN P. KORN
ATTN A. KOLB
SAN DIEGO, CA 92123

MCDONNELL DOUGLAS CORP.
5301 BOLSA AVENUE
ATTN S. SCHNEIDER
HUNTINGTON BEACH, CA 92647

MISSION RESEARCH CORP.
PO DRAWER 719
ATTN C. LONGMIRE
ATTN W. HART
SANTA BARBARA, CA 93102

MISSION RESEARCH CORP.
EM SYSTEM APPLICATIONS DIVISION
1400 SAN MATEO BLVD, SE, SUITE A
ATTN B. GODFREY
ALBUQUERQUE, NM 87108

MISSION RESEARCH CORP.--SAN DIEGO
PO BOX 1209
(VICTOR A. J. VAN LINT)
ATTN V. VAN LINT
LA JOLLA, CA 92038

NORTHROP CORP.
NORTHROP RESEARCH & TECHNOLOGY CTR
1 RESEARCH PARK
ATTN LIBRARY
PALO VERDES PENINSULA, CA 90274

PHYSICS INTERNATIONAL CO.
2700 MERCED STREET
ATTN S. PUTNAM
ATTB P. SPENCE
ATTB B. BERNSTEIN
ATTN C. STALLINGS
ATTN K. CHILDERS
ATTN A. TOEPFER
SAN LEANDRO, CA 94577

R & D ASSOCIATES
PO BOX 9695
ATTN W. GRAHAM, JR.
ATTN L. SCHLESSINGER
ATTN C. MACDONALD
MARINA DEL REY, CA 90291

DISTRIBUTION (Cont'd)

SANDIA NATIONAL LABORATORIES
PO BOX 5800
ATTN MAIL SERVICES SECT FOR 3141
ATTN MAIL SERVICES SECT FOR G. YONAS
ATTN MAIL SERVICES SECT FOR G. KUSWA,
ORG 5240
ATTN MAIL SERVICES SECT FOR M. CLAUSER,
ORG 5241
ALBUQUERQUE, NM 87185

SCIENCE APPLICATIONS, INC.
PO BOX 2351
ATTN J. BEYSTER
LA JOLLA, CA 92038

SPIRE CORP.
PO BOX D
ATTN R. LITTLE
BEDFORD, MA 01730

SRI INTERNATIONAL
333 RAVENSWOOD AVENUE
ATTN S. DAIRIKI
MENLO PARK, CA 94025

SYSTEMS, SCIENCE & SOFTWARE, INC.
PO BOX 1620
ATTN A. WILSON
LA JOLLA, CA 92038

TEXAS TECH UNIVERSITY
PO BOX 5404, NORTH COLLEGE STATION
ATTN T. SIMPSON
LUBBOCK, TX 79417

TRW DEFENSE & SPACE SYS GROUP
ONE SPACE PARK
ATTN TECHNICAL INFORMATION CENTER
REDONDO BEACH, CA 90278

US ARMY ELECTRONICS RESEARCH
& DEVELOPMENT COMMAND
ATTN TECHNICAL DIRECTOR, DRDEL-CT
ATTN LEGAL OFFICE

HARRY DIAMOND LABORATORIES
ATTN CO/TD/TSO/DIVISION DIRECTORS
ATTN RECORD COPY, 81200
ATTN HDL LIBRARY, 81100 (3 COPIES)
ATTN HDL LIBRARY, 81100 (WOODBRIDGE)
ATTN TECHNICAL REPORTS BRANCH, 81300
ATTN CHAIRMAN, EDITORIAL COMMITTEE
ATTN MORRISON, R., 13500 (GIDEP)
ATTN CHIEF, 21000
ATTN CHIEF, 21100
ATTN CHIEF, 21200
ATTN CHIEF, 21300
ATTN CHIEF, 21400
ATTN CHIEF, 21500
ATTN CHIEF, 22000
ATTN CHIEF, 22100
ATTN CHIEF, 22300
ATTN CHIEF, 22800
ATTN CHIEF, 22900
ATTN CHIEF, 20240
ATTN EISEN, H., 22800
ATTN MCGARRITY, J., 22300
ATTN KERRIS, K. G., 22900 (100 COPIES)

DATE
ILME